



2365 NE Hopkins Court
Pullman, WA 99163
Phone: 509-332-5600
support@decagon.com
DECAGON.COM



2365 NE Hopkins Court
Pullman, WA 99163
Phone: 509-332-5600
support@decagon.com
DECAGON.COM

Installation and maintenance information on the back.

Tools required:
Screw driver, Phillips

Kit (PN 30218) includes:
20254 Wall-Mount adapter block
14215 #2x 1/2" Screw, self-tapping (2)
14216 V-ring seal, 0.75" shaft
14387 Adhesive Tape, VHB, foam (2)
14558 Information Sheet, Wall Mount Kit,
VP-3 Sensor

Installation and maintenance information on the back.

Tools required:
Screw driver, Phillips

Kit (PN 30218) includes:
20254 Wall-Mount adapter block
14215 #2x 1/2" Screw, self-tapping (2)
14216 V-ring seal, 0.75" shaft
14387 Adhesive Tape, VHB, foam (2)
14558 Information Sheet, Wall Mount Kit,
VP-3 Sensor

Wall Mount Kit VP-3 Sensor

Wall Mount Kit VP-3 Sensor

Wall Mount Kit VP-3 Sensor

Wall Mount Kit VP-3 Sensor

Kit (PN 30218) includes:

20254 Wall-Mount adapter block
14215 #2x 1/2" Screw, self-tapping (2)
14216 V-ring seal, 0.75" shaft
14387 Adhesive Tape, VHB, foam (2)
14558 Information Sheet, Wall Mount Kit,
VP-3 Sensor

Tools required:

Screw driver, Phillips

Installation and maintenance information on the back.

2365 NE Hopkins Court
Pullman, WA 99163
Phone: 509-332-5600
support@decagon.com
DECAGON.COM



Kit (PN 30218) includes:

20254 Wall-Mount adapter block
14215 #2x 1/2" Screw, self-tapping (2)
14216 V-ring seal, 0.75" shaft
14387 Adhesive Tape, VHB, foam (2)
14558 Information Sheet, Wall Mount Kit,
VP-3 Sensor

 
Tools required:

Screw driver, Phillips

Installation and maintenance information on the back.

2365 NE Hopkins Court
Pullman, WA 99163
Phone: 509-332-5600
support@decagon.com
DECAGON.COM



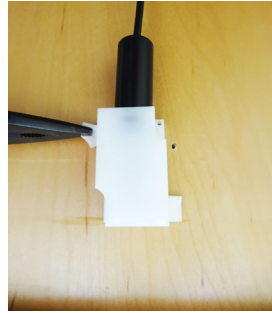


Removal of wall mounts when adhesive tape is used: The wall mount is designed so that the adhesive foam strips on the top and bottom can be grabbed and pulled gently sideways thereby stretching the foam strip which removes it from the wall.

Installation: The sensor body should be inserted into the bottom of the wall mount block prior to mounting. Use a small amount of water around o-ring of the sensor body and press the sensor into the lower hole of the wall mount. The wall mount should be mounted on a clean surface with the cable pointing down and the seal pointing towards the wall. The wall mount can be adhered to the wall using the two adhesive foam strips by removing the tape backing or attached to the wall using the two self-tapping mounting screws. When using the self tapping screws, it is important that the screws are tightened only to the point that they secure the wall mount. Tightening beyond this point may cause the screw to strip the wall that it is mounted against.



Installation:

 The sensor body should be inserted into the bottom of the wall mount block prior to mounting. Use a small amount of water around o-ring of the sensor body and press the sensor into the lower hole of the wall mount. The wall mount should be mounted on a clean surface with the cable pointing down and the seal pointing towards the wall. The wall mount can be adhered to the wall using the two adhesive foam strips by removing the tape backing or attached to the wall using the two self-tapping mounting screws. When using the self tapping screws, it is important that the screws are tightened only to the point that they secure the wall mount. Tightening beyond this point may cause the screw to strip the wall that it is mounted against.

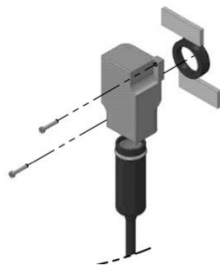

Removal of wall mounts when adhesive tape is used:

  The wall mount is designed so that the adhesive foam strips on the top and bottom can be grabbed and pulled gently sideways thereby stretching the foam strip which removes it from the wall.

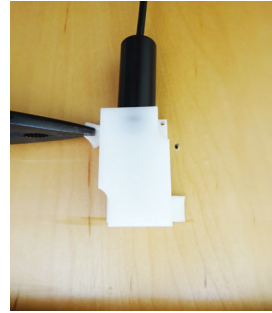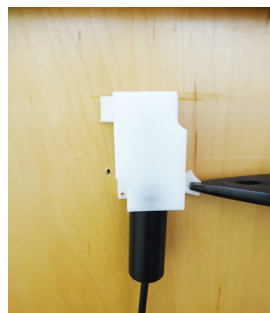


Removal of wall mounts when adhesive tape is used: The wall mount is designed so that the adhesive foam strips on the top and bottom can be grabbed and pulled gently sideways thereby stretching the foam strip which removes it from the wall.

Installation: The sensor body should be inserted into the bottom of the wall mount block prior to mounting. Use a small amount of water around o-ring of the sensor body and press the sensor into the lower hole of the wall mount. The wall mount should be mounted on a clean surface with the cable pointing down and the seal pointing towards the wall. The wall mount can be adhered to the wall using the two adhesive foam strips by removing the tape backing or attached to the wall using the two self-tapping mounting screws. When using the self tapping screws, it is important that the screws are tightened only to the point that they secure the wall mount. Tightening beyond this point may cause the screw to strip the wall that it is mounted against.

Installation:

 The sensor body should be inserted into the bottom of the wall mount block prior to mounting. Use a small amount of water around o-ring of the sensor body and press the sensor into the lower hole of the wall mount. The wall mount should be mounted on a clean surface with the cable pointing down and the seal pointing towards the wall. The wall mount can be adhered to the wall using the two adhesive foam strips by removing the tape backing or attached to the wall using the two self-tapping mounting screws. When using the self tapping screws, it is important that the screws are tightened only to the point that they secure the wall mount. Tightening beyond this point may cause the screw to strip the wall that it is mounted against.

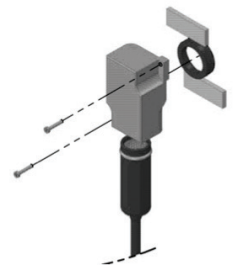

Removal of wall mounts when adhesive tape is used:

The wall mount is designed so that the adhesive foam strips on the top and bottom can be grabbed and pulled gently sideways thereby stretching the foam strip which removes it from the wall.

