


TEROS VERIFICATION CLIP

METER

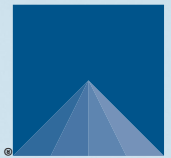

SUPPORT

Have a question or problem? Our support team can help.

We manufacture, test, calibrate, and repair every instrument in house. Our scientists and technicians use the instruments every day in our product testing lab. No matter what your question is, we have someone who can help you answer it.

NORTH AMERICA

Email: support.environment@metergroup.com
Phone: +1.509.332.5600

EUROPE

Email: support.europe@metergroup.com
Phone: +49 89 12 66 52 0

TEROS VERIFICATION CLIP QUICK START

Preparation

Confirm that the verification clip components are intact. The verification clip helps verify proper function and accuracy for Teros 10, 11, and 12 soil moisture sensors. A data acquisition system and the appropriate software are required, such as the **ZL6** and **Zentra Utility** or Zentra Utility mobile.

ATTENTION

TEROS soil moisture sensors require the most current software and firmware versions. Please make updates as necessary.


ZL6 firmware version 2.02 or higher
PROCHECK firmware version 1.70 or higher
ZENTRA Utility version 1.14 or higher

Go to metergroup.com/environment/downloads to find the current software or firmware version for the data logger being used.

Installation

1. Place Verification Clip on Sensor

Slide the verification clip onto the two prongs farthest away from the sensor cable with the arrow pointing toward the sensor.

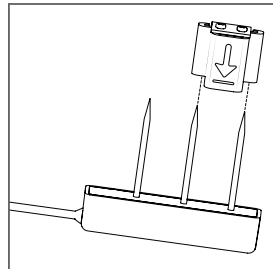


WARNING

Risk of personal injury is present. Sensor needle points are extremely sharp and will puncture skin. Please handle with care.


2. Ensure Correct Verification Clip Placement

The verification clip should rest snugly against the sensor body.

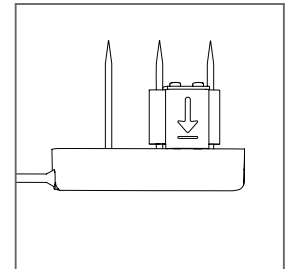

3. Connect Teros Sensor to Data Logger

Plug the sensor into the data logger and use the SCAN function in the software.

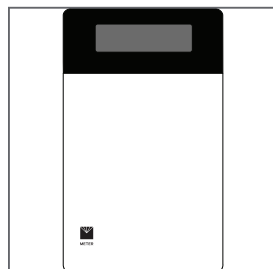

4. Verify Sensor Function and Accuracy

The sensor should read within the appropriate ranges.

	RAW count	VWC (m ³ /m ³)
METER logger		
TEROS 11/12	2650 to 2730	0.332 to 0.363
TEROS 10	2650 to 2800	0.356 to 0.419
Non-METER logger		
TEROS 10	1940 to 2050 mV	0.356 to 0.419